

metrozet

iCOBI
User Manual

Document 305200
Revision NC
May 2011

Warranties, Disclaimers & Trademarks

Copyright © 2008-2009 Metrozet, LLC.

The trademarks used throughout this manual, registered or not, are: Metrozet, iCOBI, and TSA-100S-D24.

This publication is provided "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, or non-infringement. Metrozet, Inc. and its affiliates assume no responsibility for errors or omissions in this publication or other documents which are referenced by or linked to this publication.

References to corporations, their services and products, are provided "as is" without warranty of any kind, either expressed or implied. In no event shall Metrozet, Inc. be liable for any special, incidental, indirect or consequential damages of any kind, or any damages whatsoever, including, without limitation, those resulting from loss of use, data or profits, whether or not advised of the possibility of damage, and on any theory of liability, arising out of or in connection with the use or performance of this information.

This publication could include technical or other inaccuracies or typographical errors. Changes are periodically added to the information herein; these changes will be incorporated in new editions of the publication.

All rights reserved. No part of this publication may be copied, photocopied, reproduced, transmitted, transcribed, or reduced to any electronic medium or machine-readable form without prior written consent of Metrozet, Inc.

Notice

Metrozet Inc. reserves the right to make improvements in the software described in this documentation at any time and without notice. The information contained here is subject to change without notice and should not be construed as a commitment by Metrozet Inc.

The software described in this document is provided as a licensed item, in conjunction with Metrozet equipment. It may not be copied or distributed for use on other than the equipment it was licensed for.

Disclaimer

Metrozet Inc. shall have no liability or responsibility to you or any other person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by this documentation or the software described in it. This includes but is not limited to any interruption of service, loss of business or anticipatory profits or consequential damages resulting from the use or operation of such software or computer programs.

Warranty

We warrant each new product manufactured by Metrozet for a period of one year from date of shipment. Defects in material or workmanship found within that period will be replaced or repaired (at our option) without charge for materials or labor. If Metrozet authorizes the return of a product, we will pay the round trip freight charges to the factory for repair under warranty. If subsequent evaluation at Metrozet establishes that necessary repairs are due to misuse, then the customer must assume all charges.

Insurance for all shipments, either first sale or repair, are the responsibility of the customer. Metrozet can arrange to have a policy purchased on behalf of the customer for the first sale; however, it is the responsibility of the customer to notify the carrier immediately of any freight or handling damage.

Metrozet will make every effort to assist the customer in filing a claim with the carrier or insurance company.

If on-site warranty repair or replacement is required, the customer will be charged the then-current field service rate for portal-to-portal travel time plus actual portal-to-portal travel charges. There is no charge for on-site warranty repair labor.

Items not manufactured by Metrozet but included in systems (e.g. peripherals, options) are warranted for 90 days from date of shipment.

Items not manufactured by Metrozet and not part of a system (e.g. digitizers, printers, analyzers) may be warranted by the original equipment manufacturer. Metrozet will do everything possible to expedite and coordinate any warranty service from the original manufacturer.

Software not produced by Metrozet may carry its own warranty and the customer should sign any appropriate license agreement(s) and return to software manufacturer. Metrozet assumes no responsibility for such third-party software.

Software and software updates provided by Metrozet Inc. for its Strong Motion and Seismological measurement and recording equipment have a warranty period of one year. This warranty applies to the standard software package as well as to options or special software provided to the customer. An update shipped under warranty will be covered by the original system's warranty for the balance of the one year period.

Warranty claims shall be made on Software Change Request forms (SCRs). Problems reported by filing an SCR within one year will be corrected free of charge. SCRs filed after the one year period will be billed at the then-current rates.

The method of correction will be at Metrozet Inc.'s discretion, in that a correction may be supplied via a software patch, or by shipping updated software.

Shipment of updated software will sometimes require hardware or configuration changes to the system. Hardware changes may include, but are not limited to, memory and disk drives. Required hardware or configuration changes are not included in the cost of a software update, and may represent an additional cost to the customer.

All software, once delivered, is covered under warranty. Updates fitting the following descriptions would NOT be considered valid warranty claims, and the software would be billed accordingly:

Updates not prompted by a software problem.

Additional software options requested voluntarily by the customer, such as the addition of special software.

Metrozet, LLC., 21143 Hawthorne Blvd., #456 Torrance, CA 90503 USA

Phone: (866) 823-0339

E-mail: sales@metrozet.com

Website: www.metrozet.com

Table of Contents

Warranties, Disclaimers & Trademarks	i
Safety	iii
System Overview	5
Installation & Setup	6
Front Panel.....	7
LEDs.....	7
Power	8
Console/Serial/USB	8
Ethernet	8
Digital Sensor Interface:.....	8
Seal Screw	9
Operating Environment	9
Unpacking & Inspecting the Unit	9
Cleaning the iCOBI	10
Maintenance Service.....	10
System Configuration.....	10
Triggered Recording.....	11
Pre- & Post-Event Time	11
Channel Triggering	11
Cables Reference	11
Power Connector	11
Serial, USB, Console Connector	12
Ethernet LAN Connector	15
Digital Sensor Interface Cable	16
Drawings.....	17

Safety

These symbols may appear on Metrozet equipment or in this manual:



When you see this symbol, *pay careful attention*. Refer to the similarly marked, relevant part of this manual before servicing the instrument.



This symbol means a *low-noise earth ground*. The noted item should be grounded to ensure low-noise operation, and to serve as a ground return for EMI/RFI and transients. Such a ground *does not work as a safety ground* for protection against electrical shock!



This symbol means an alternating current (AC) power line.



This symbol means a direct current (DC) power line derived from an AC power line.



This symbol indicates an electrostatic sensitive device (ESD), meaning that when handling the marked equipment you should observe all standard precautions for handling such devices.



This symbol indicates that a particular step/process or procedure is required to ensure the installation maintains conformity to European requirements.



This symbol indicates that this referenced equipment or material should be re-cycled and not thrown in the normal trash stream.



This symbol indicates that the step/process or equipment has an environmental consequence and steps such as recycling are required.

These safety-related terms appear in this manual:

NOTE: Statements identify information that you should consider before moving to the next instruction or choice.

Caution: Statements identify conditions or practices that could result in damage to the equipment, the software, or other property.

WARNING! Statements identify conditions or practices that could result in personal injury or loss of life.

Follow the precautions below to ensure your personal safety and prevent damage to the system. The central unit is powered by a 15.5 VDC power supply assembly. The system also charges a supplied external Sealed Lead Acid Battery (SLA) that can power the unit when the external power sources fail.

Power Supply Assembly

Plug the PSA's power cord into AC outlets that will not apply more than 260 V_{RMS} between the supply conductors or between either supply conductor or ground. A protective ground connection (provided through the grounding conductor in the PSA and its power cord) is essential for safe operation. The PSA is designed for indoor use only; it must not be subject to immersion in water, high humidity, or temperatures above 70°C.

External Battery

Follow the precautions in this manual when handling and replacing external batteries. Metallic instruments of any kind could short the battery terminals, resulting in fire or explosion. Do not drop the battery or attempt to disassemble it. The only correct replacement battery is a sealed lead-acid battery with relief vents and ratings comparable to the original battery. Never try to use a non-rechargeable battery with the unit.

Grounding the Digitizer

When using the PSA to power the unit from the AC mains supply, remember that the unit is grounded through the PSA power cord. To avoid electric shock, plug the PSA cord into a properly wired receptacle where the protective earth ground has been verified. Do this verification before making any power connections to the unit.

Use the Proper Power Cord

Use the power cord and connector supplied with PSA, or an equivalent IEC-standard power cord. Be sure that it is in good condition.

Antenna, Phone & LAN Cabling

Never install antenna, telephone, or LAN wiring during electrical storms. Always ensure adequate separation between antenna cabling, telecom cabling, or LAN cabling and high voltage wiring. Always perform a safety check on telecom and LAN wiring to measure the voltage before working on the wiring. Remember telephone wiring carries fifty (50) to sixty (60) volts of DC and the ring signal at ninety (90) VAC can deliver a very uncomfortable shock. Power over Ethernet Cabling can carry DC voltages of up to 56VDC. To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. Ethernet LAN ports contain SELV circuits, and some WAN ports contain TNV circuits. Some LAN and WAN ports both use RJ-45 connectors. Use caution when connecting cables.

Do Not Operate in Explosive Atmospheres

The unit and the PSA provide no explosive protection from static discharges or arcing components. Do not operate the equipment in an atmosphere of explosive gases.

The Metrozet iCOBI system is not To Be Used For Life Support or Life-Critical Systems

These products are not designed for operating life critical support systems and should not be used in applications where failure to perform can reasonably be expected to create a risk of harm to property or persons (including the risk of bodily injury and death).

System Overview


Seismic monitoring systems provide data and information on the behavior of buildings leading to improved understanding and better design codes. For these reasons, many municipalities (e.g., City of Los Angeles, CA USA) require seismic instrumentation or offer benefits such as reduced post-event inspection requirements (e.g., BORP San Francisco, CA USA).

In the Los Angeles Metropolitan area, seismic monitoring is required under the 2008 Los Angeles Building Code (§1613.8.2) which specifies a minimum of three accelerographs to be deployed at the base, middle, and top of a structure over ten stories or six stories with aggregate floor area of 60,000 square feet or more. The three instruments are usually placed in a vertical stack and interconnected for common triggering and timing.

Internet ready, code compliant building instrumentation (iCOBI) system for seismic monitoring, is Metrozet's flexible solution to these requirements and consists of a central multi-channel recorder and three digital triaxial accelerometers. The iCOBI recorder provides each digital sensor power and time over a CAT-5 cabling. The instruments are connected in a daisy-chain configuration. A single battery and AC trickle charger is provided near the iCOBI recorder.

The table below lists the various components of the iCOBI system and the typical configuration is illustrated in the following figure.

ITEM	P/N	DESCRIPTION	QTY
1	111830-02-PL	iCOBI Central Data Recorder with 2X TSA Sensor Interface	1
2	150110-02-PL	24-bit Digital Triaxial Seismic Accelerograph (TSA)	3
3	150090-PL	Cable, iCOBI Sensor Interface to TSA, 10ft	1
4	150094-PL	Cable, iCOBI Sensor Interface to Dual RJ45F, 10ft	1
5	150093-PL	Cable, TSA to Dual RJ45F, 10ft	2
6	112259-PL	Power Supply, Wide Input AC Adapter with Battery Leads	1
7	841053	Battery, 12V, 60Ah	1
8	851437	Battery Box	2
9	N/A	Cable, standard Ethernet for interconnect, variable length	2
10	112293-PL	Optional, Cable, iCOBI Ethernet to RJ45M, 6ft	1
11	112294-PL	Optional, Cable, iCOBI Console to DB9F, 25ft	1

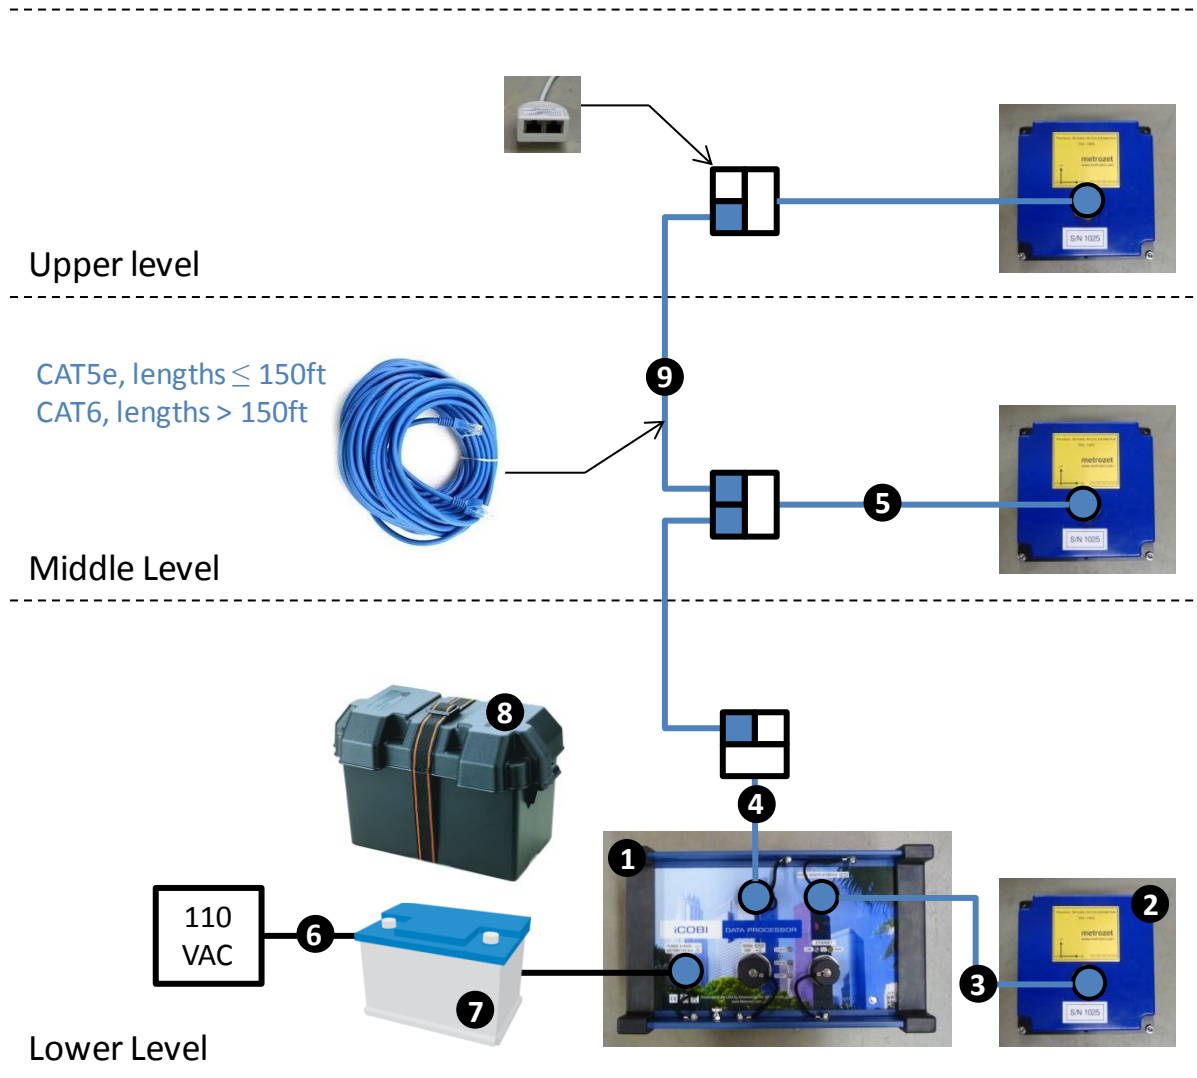

Installation & Setup

Each of the TSA-100S-D24 sensors should be mounted in a location that provides convenient connectivity to the central iCOBI recorder and that is not generally accessible to the public. The connection to the iCOBI recorder is typically made using standard CAT5 computer cable (CAT6 cable for longer lengths) as detailed in the Digital Sensor Interface section of this manual. The sensors are powered from the iCOBI recorder using low voltage DC and do not require an AC power connection.

The TSA mounting plate uses adjustable threaded screws to provide three kinematic contact points so that the sensors can be leveled. Metrozet recommends that the sensor mounting plate be leveled using a good quality bubble level by adjusting these screws in order to minimize the sensor offset, but the system will work correctly without this step.


Alternatively, single-point mounting adapter plates may be used as well.

To satisfy the applicable building code, the three accelerographs shall be located in the basement, mid-height and near the top of the building. Exact locations are at the discretion of building owner.

Because the system has a single power source, each digital sensor requires power over the same communication cable. And because 48V is supplied, there is potential for damage if inappropriate appliances are connected. For this reason, the connections should be well protected i.e., housed within junction boxes.

iCOBI Front Panel

The iCOBI front panel consists of several status LEDs and mil-type connectors allowing you to connect power, serial, Ethernet and digital sensor connections.

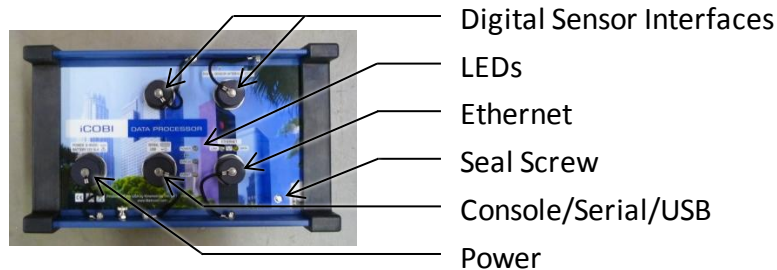

LEDs

The LEDs on the front panel provide the following information:

Power:

- OFF - No power
- Steady Green - Running off of external power or POE (Power Over Ethernet)
- Flashing Green - The system is starting up
- Infrequent Green - Running off of battery

Status:

- OFF - Working, no time source
- Steady Red - Power supply boot loader turned on. Used to load new power supply firmware
- Flashing Red - System fault detected
- Infrequent Red - System error detected
- Steady Green - Waiting to turn on. In initial start up delay or timed operation window
- Flashing Green - The system is starting up
- Orange – Super-capacitor is being charged
- Alternating Red and Green - The system is shutting down

Event:

- OFF - No events
- Flashing Green - Unused condition
- Infrequent Green - Events stored

Ethernet Link (Green):

- ON - Ethernet 10Mb link detected
- OFF - No Ethernet link detected

Ethernet Data (Amber):

- ON - Ethernet data transmission in progress
- OFF - Idle

Power

This connector provides access to external power input, and the external battery connection.

The external power input allows provision of an external DC power source that is used both to operate the unit and charge a battery, if connected.

The external battery connection is used to connect a battery that will be float charged by the system to provide operational autonomy in the case of temporary loss of external power.

Console/Serial/USB

This connector provides access to the console port connection, primary serial port, and USB device interface.

The console port connection is used to provide access to the operating system console that is required in initial setup of the system (before network interfaces are defined) and in certain diagnostic and maintenance operations. The console port is not needed in normal operation. The console port is `/dev/console` and the default baud rate is 38400.

The primary serial port is an RS-232 serial port that can be used by user application software for a variety of purposes. The serial port supports full hardware handshaking. The serial port is `/dev/ttyS0` and the default baud rate is 9600.

The USB device interface is planned for future use and is not functional as of this manual version.

Ethernet

This connector provides low power 10Mb Ethernet connections.

Ethernet is typically used for connection to local equipment, such as local digitizers and/or a local hub or switch for data transfer and unit configuration.

Digital Sensor Interface:

This connector provides communication, power, and timing to the attached TSA sensors. And because 48V is supplied, there is potential for damage if inappropriate appliances are connected

Caution: The Digital Sensor Interface connector supplies 48VDC power to Digital Sensor over CAT5 cabling with standard RJ45 connectors. Do NOT connect any Ethernet device to this interface or it will be damaged.

Seal Screw

The small screw located in the lower right of the front panel is the seal screw. It is used at the factory for leak testing.

Caution: *This screw should NOT be removed by the user as doing so may expose the internals of the unit to the environment and damage it.*

Operating Environment

The iCOBI needs to be installed in a location that provides the following environmental conditions.

The iCOBI operating temperature range with the standard options is: -20 to +60 °C

This can be limited by user installed equipment. Replacing the storage cards with commodity cards can reduce the operating temperature range.

The iCOBI is configured to only charge an attached Sealed Lead Acid (SLA) battery from: -0.0 to + 40.0 °C

The unit will draw power from an SLA battery over the full operating temperature range but will show a fault if it runs outside of the range: - 15.0 to + 50.0 °C

The unit should not be placed where it is exposed to direct sunlight and the external battery used should be located in the same temperature environment as the unit and should again not be exposed to direct sunlight.

The case of the unit is designed to meet the requirements of a NEMA 6P enclosure (equivalent to IP67). The system can operate in humidity levels of up to 100%. The unit should be protected from rain and snow and should not be allowed to stand in water for longer than one hour.

Unpacking & Inspecting the Unit

Before accepting the shipment the shipping carton should be examined for any obvious damage and this should be recorded by the freight carrier.

The iCOBI ships in a custom designed carton. This carton can be used to return the unit or to ship it to other destinations. It should be carefully opened at the top so it can be re-used.

On top of the unit is an additional carton that will contain any accessories ordered with the unit such as connectors, cables, AC/DC power supply. Please check the contents of this box against the packing list.

The iCOBI is beneath this box packed in custom foam inserts. Carefully pull the unit and the inserts from the box. The unit should have no signs of external damage.

The unit is then ready for installation.



When the packaging is no longer required please recycle the cardboard cartons and foam insert appropriately.

Cleaning the iCOBI

Disconnect all power from the unit before cleaning it including the external battery. Then wipe off the exterior surfaces with a mild detergent and a damp soft cloth. Do not use an abrasive cloth especially on the label area as this will damage the unit. The external battery can also be cleaned with a mild detergent and damp cloth following the precautions outlined in the battery maintenance section.

Caution: Possible water damage. Do not loosen the seal screw or end caps before cleaning the unit. Do not use water to clean the inside of the recorder. Doing so will severely damage the unit!

The iCOBI should not normally be opened so the interior of the units should be clean. If dust or debris does get inside the unit, we recommend you use a small "computer vacuum cleaner" to remove this debris. Make sure you have turned the power off before vacuuming the unit.

Maintenance Service

As part of the applicable building code specifications, the iCOBI system requires a yearly maintenance visit. At this visit, service engineers approved by local municipality will perform all required maintenance.

If your unit appears to need repair or service in between maintenance visits, please contact Metrozet.

System Configuration

The factory default setup is configured is to satisfy the requirements specified by the City of Los Angeles in the Information Bulletin/Public-Building Code P/BC 2008-048.

PARAMETER DESCRIPTION	VALUE
Full Scale Measurement Range	±4g
Sample Rate	200sps
Trigger Threshold	0.01g (0.25% FS)
Pre-Event Time	20s
Post-Event Time	30s
Data File Format	EVT
Votes to trigger	1
Votes to detriger	1
Trigger Filter	Classic Strong Motion

Triggered Recording

Pre- & Post-Event Time

The pre-event time determines how many seconds of data before the trigger criteria were met will be recorded in the event file. In accordance with City of LA requirements, it is set at 20s.

The post event time determines how many seconds after the system has de-triggered will be recorded in the file. In accordance with City of LA requirements, it is set at 30s.

Channel Triggering

The threshold trigger has two parameters for each channel. The first is the threshold trigger, which is the level in percent of full scale that causes the channel to trigger. In accordance with City of LA requirements, it is set at 0.01g or 0.25% of full scale range which is 4g.

The second parameter is the threshold de-trigger. This is the value in percent of full scale the signal must fall below after triggering for the channel to dettrigger. In accordance with City of LA requirements, it is set at 0.01g or 0.25% of full scale range which is 4g.

The pre-trigger filter is set as the classic strong motion filter. At a sampling rate of 200 Hz, this puts the band-pass at approximately 0.1 to 12.5Hz

Each channel is assigned one vote that it casts towards getting the system to trigger.

Cable References

This section contains cable and connector reference material.

Power Connector

Connector: 851-07P14-12PX54-A7, 12 Pins, Shell 14, Rotated X, Blk, (8x1,4x1.6)

Mating Connector: 851-06EC14-12SX54, 12 Sockets, Shell 14, Rotated X, Blk (KMI 852173)

Power In from 8-18VDC source needs to be ~15.5V for Battery Charging. This connector uses pins as power is supplied to the unit, charging current is only output from the unit when power has been supplied through the connector. The power pins are provided with Reverse Polarity Protection, ESD & EMI Protection, and protection from lightning induced transients using Gas Arresters.

The battery charging circuit is designed to charge and take power from a 12V SLA battery. (Observe all safety warnings and cautions!) It features Reverse Polarity Protection, ESD & EMI Protection, and protection from lightning induced transients using Gas Arresters.

This connector provides one user input and one user output that can be used for several purposes as determined by the software running on the unit:

- The input which is read by the PSOC can function as the equivalent of the Baler "ENETBPWR" signal
- The input and output can be used as a trigger in line and the output as a trigger out to allow common triggering of seismic and other instruments.


The digital inputs and outputs are isolated from the system and have both ESD and EMI protection. They are not protected against lightning induced transients.

The one wire power LAN is used to monitor and control Metrozet optional external power systems and "intelligent" batteries, and to communicate with an optional Metrozet local POE hub that is providing local power to the unit. It should not be run extended distances and assumes lightning protection is provided on the input end as it is only ESD and EMI protected.

NOTE: If the optional internal power connector is used the pins that are used will be disconnected from the Front Panel so they are open - this is to prevent multiple power supplies or batteries being connected in contention. This will be indicated on the labeling of the unit.

Power Connector Description

Pin	Name	Description	Protection	Comments
A	DIGIN_1+	General Purpose Digital Input 1+	ISO/ESD/EMI	General Purpose Input - Connect to ENETBPWR+ for Baler Simulation
B	DIGIN_1-	General Purpose Digital Input 1-	ISO/ESD/EMI	General Purpose Input - Connect to ENETBPWR+ for Baler Simulation
C	1WPWR	Power to PSE 1 Wire Device	ESD/EMI	Used to Control KMI Power Options
D	1WDATA	Data to/from PSE 1 Wire Device	ESD/EMI	Used to Control KMI Power Options
E	1WGND	Digital Ground	ESD/EMI	Used to Control KMI Power Options
F	PGP	Protective Ground	N/A	Protective Ground Connection
G	DIGOUT_1+	General Purpose Digital Output 1+	ISO/ESD/EMI	General Purpose Output - can be used as Trigger
H	DIGOUT_1-	General Purpose Digital Output 1-	ISO/ESD/EMI	General Purpose Output - can be used as Trigger
J	FPPWRIN	8-16VDC In to System	RP/LIT/ESD/EMI	System Power Input
K	FPBTPWR	Power to External Battery	RP/LIT/ESD/EMI	Charge Output/Battery Input
L	FPBTRTN	Power Return from Battery	RP/LIT/ESD/EMI	Battery Return
M	FPPWRRTN	Power Return	RP/LIT/ESD/EMI	System Power Return

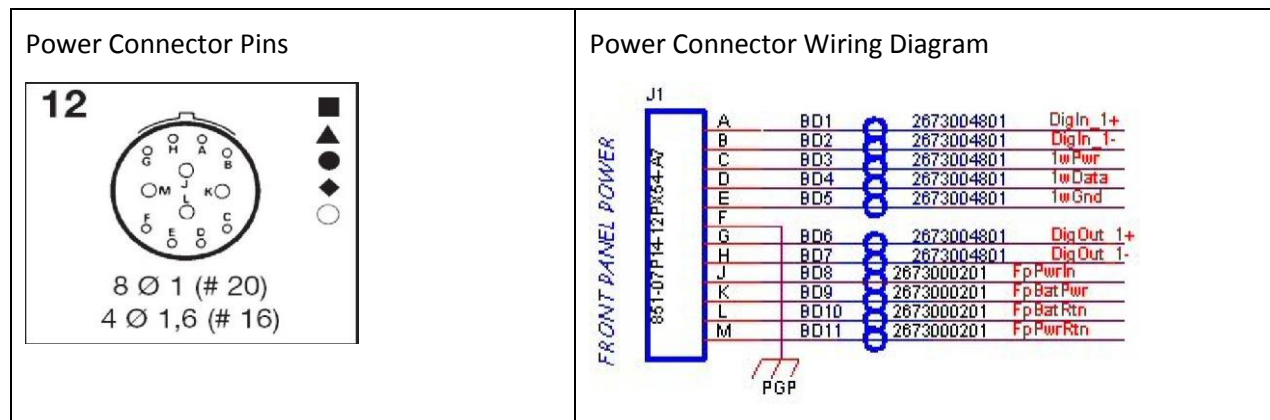

Serial, USB, Console Connector

Connector: 851-07P14-18PX54-A7, 18 Pins, Shell 14, Rotated X, Blk

Mating Connector: 851-06EC14-18SX54, 18 Sockets, Shell 14, Rotated X, Blk (KMI 852174)

This connector includes a full function RS232 port that can be used as a communication interface to the system. The DSR line can also be monitored to turn the system on allowing the unit to function with a Q330 controlling power via the serial port connection.

The USB 1.1 interface is present to allow a laptop to connect to the unit via USB. (Future Software Function)


The three wire RS232 console connection is also present for system set up and repair. This is not meant as a port to be used for data input or output.

Pins are used as the USB interface supplies 5V to the unit so power is present on the connecting cable. Protection levels for all pins are ESD/EMI only as long external cables are not supposed to connect to these pins.


Serial/USB/Console Connector Description

Pin	Name	Description	Protection	Standard Connector Pins	Comments
A	X1DCD	Serial Port 1 DCD	ESD/EMI	DB9-1	
B	X1RXD	Serial Port 1 Receive to Unit	ESD/EMI	DB9-3	
C	X1TXD	Serial Port 1 Transmit from Unit	ESD/EMI	DB9-2	
D	X1DTR	Serial Port 1 DTR	ESD/EMI	DB9-4	
E	X1COM	Serial Port 1 Common	ESD/EMI	DB9-5	
F	X1DSR-ON	Serial Port 1 DSR	ESD/EMI	DB9-6	Routed to PSOC for System Turn On
G	X1RTS	Serial Port 1 RTS	ESD/EMI	DB9-7	
H	X1CTS	Serial Port 1 CTS	ESD/EMI	DB9-8	
J	X1RI	Serial Port 1 RI	ESD/EMI	DB9-9	
K	USB DATA+	USB Data Differential Plus	ESD/EMI	USBA-3	USB 1.1 Device Interface
L	USB DATA-	USB Data Differential Minus	ESD/EMI	USBA-2	USB 1.1 Device Interface
M	USB GND	Power Return to USB Host/Hub	ESD/EMI	USBA-4	USB 1.1 Device Interface
N	USB VCC	Power from USB Host/Hub	ESD/EMI	USBA-1	USB 1.1 Device Interface
P	PGP	Protective Ground	N/A	USBA-Shield	
R	CONRXD	Console RS232 RX	ESD/EMI	DB-9(C) Pin 3	Console for System Setup/Recovery Only!
S	CONTXD	Console RS232 TX	ESD/EMI	DB-9(C) Pin 2	Console for System Setup/Recovery Only!
T	CONCOM	Console Common	ESD/EMI	DB-9(C) Pin 5	Console for System Setup/Recovery Only!
U	PGP	Protective Ground	N/A	DB-9 Shell	Use for Both RS232's

Serial/USB/Console Connector Pins

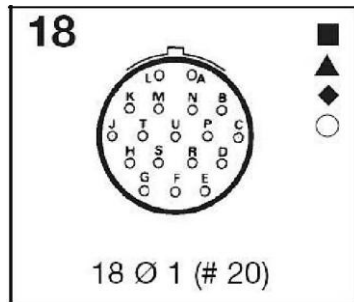

Serial/USB/Console DB-9 Connector Pins

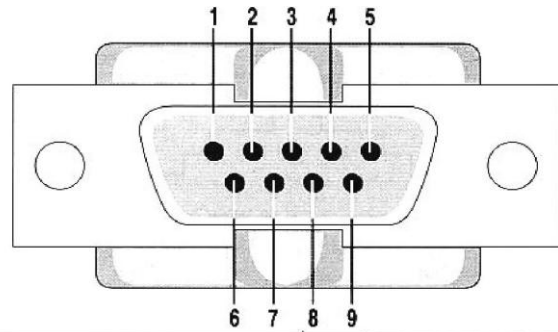


Pin	Signal	Pin	Signal
1	Data Carrier Detect	6	Data Set Ready
2	Received Data	7	Request to Send
3	Transmitted Data	8	Clear to Send
4	Data Terminal Ready	9	Ring Indicator
5	Signal Ground		

Serial/USB/Console USB Connector Pins

USB Series "A" and Series "B" Connector Termination Assignment

Contact Number	Signal Name	Typical Wiring Assignment
1	VBUS	Red
2	D-	White
3	D+	Green
4	GND	Black
Shell	Shield	Drain Wire

Serial/USB/Console Connector Wiring Diagram

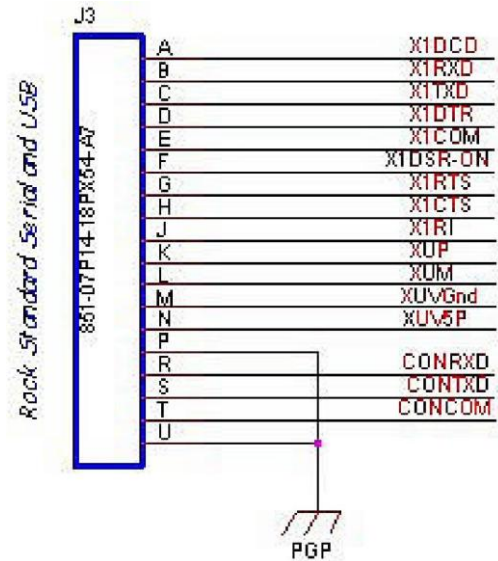

Ethernet LAN Connector

Connector: 851-07P12-8PX54-A7, 8 Pins, Shell 12, Rotated X, Blk

Mating Connector: 851-06EC12-8SX54, 8 Sockets, Shell 12, Rotated X, Blk (KMI 852175)



This pin definition supports the POE option on the Mil Type connector for a 10-Base-T connection. The pins correspond to the 8 wires in the four pair cable. The transmission and receive pairs are on the outside. This connector uses pins as power is present on the incoming cable. The Ethernet connections are all isolated with a 1500V Transformer followed by semiconductor transient suppressors. EMI protection is provided by high frequency ferrite beads on the connector.

Wiring colors are per EIA T568B color code.





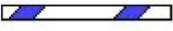

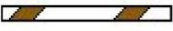

As there is no shield on a CAT-5(e) cable there is no need for a separate PGP pin. (Connector J4 on Front Panel)

Ethernet LAN Connector Description

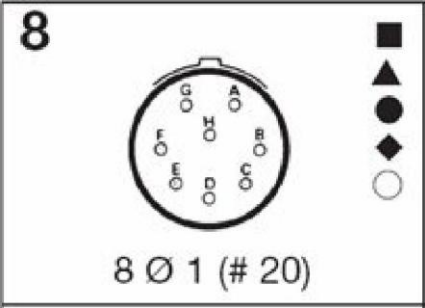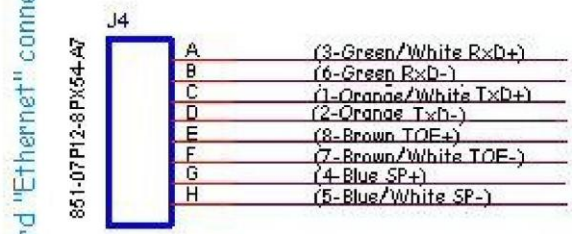Pin	Name	Description	Protection	RJ-45 Pin & Wire Color (T568B)	Comments
A	E1RX+	10 Base-T Ethernet Data Receive +	ISO/ESD/EMI	Pin 3 White/Green	
B	E1RX-	10 Base-T Ethernet Data Receive -	ISO/ESD/EMI	Pin 6 Green	
C	E1TX+	10 Base-T Ethernet Data Transmit +	ISO/ESD/EMI	Pin 1 White/Orange	
D	E1TX-	10 Base-T Ethernet Data Transmit -	ISO/ESD/EMI	Pin 2 Orange	
E	TOE+	10 Base-T Ethernet Spare Pair 1+	ISO/ESD/EMI	Pin 8 Brown	Power over Ethernet Option
F	TOE-	10 Base-T Ethernet Spare Pair 1-	ISO/ESD/EMI	Pin 7 White/Brown	Power over Ethernet Option
G	SP+	10 Base-T Ethernet Spare Pair 2+	ISO/ESD/EMI	Pin 4 Blue	Power over Ethernet Option
H	SP-	10 Base-T Ethernet Spare Pair 2-	ISO/ESD/EMI	Pin 5 White/Blue	Power over Ethernet Option

<p>Ethernet LAN Connector Pins</p> 	<p>Ethernet LAN Connector Wiring Diagram</p> 
--	---

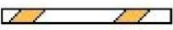Ethernet Wiring Colors

RJ45 Pin #	Wire Color (T568B)	Wire Diagram (T568B)	10Base-T Signal 100Base-TX Signal	1000Base-T Signal
1	White/Orange		Transmit+	BI_DA+
2	Orange		Transmit-	BI_DA-
3	White/Green		Receive+	BI_DB+
4	Blue		Unused	BI_DC+
5	White/Blue		Unused	BI_DC-
6	Green		Receive-	BI_DB-
7	White/Brown		Unused	BI_DD+
8	Brown		Unused	BI_DD-


Digital Sensor Interface Cable

The TSA-100S-D24 sensors are connected to the central iCOBI station using twisted pair wiring with four twisted pairs, 24AWG or larger, with a resistance of 0.188 ohms/meter or less and a nominal high frequency impedance of 100 ohms \pm 15 ohms. Standard CAT5, CAT5E, or CAT6 computer cable meets these requirements. The connections are as follows


Usage	RJ45 Connector Pin Numbers	iCOBI connector pin number (10 pin Souriau)	Sensor connector pin number (18 pin Souriau)
RS485 Tx Non-Inverting Shared RS485 Tx and RS485 Rx Non-Inverting (if half duplex)	Pin 1 (Pair #3)	A	M
RS485 Tx Inverting Shared RS485 Tx and RS485 Rx Inverting (if half duplex)	Pin 2 (Pair #3)	B	N
Ground	Pins 7 and 8 (Pair #4)	D	J
Plant HV in	Pins 4 and 5 (Pair #1)	E	K
PPS Rx Non-Inverting	Pin 3 (Pair #2)	G	S
PPS Rx Inverting	Pin 6 (Pair #2)	K	G

Drawings


P/N 112259-PL, AC Power Supply

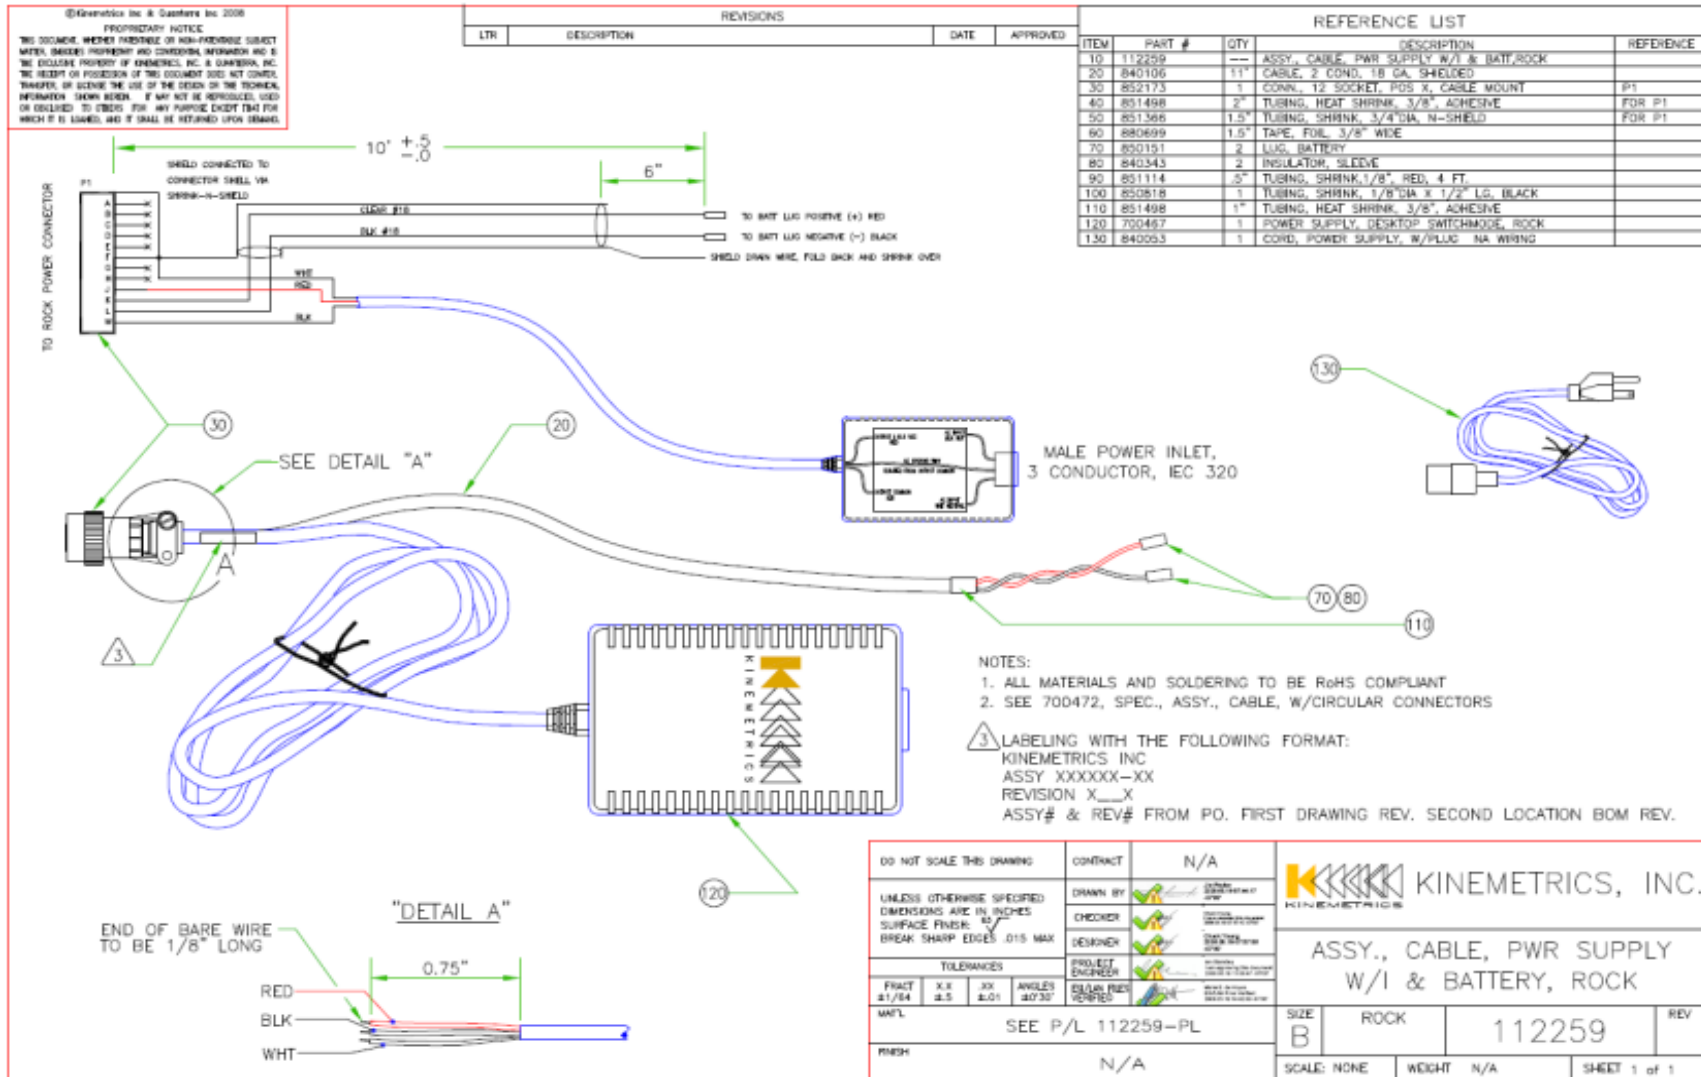

P/N 150090-PL, iCOBI Interface to TSA

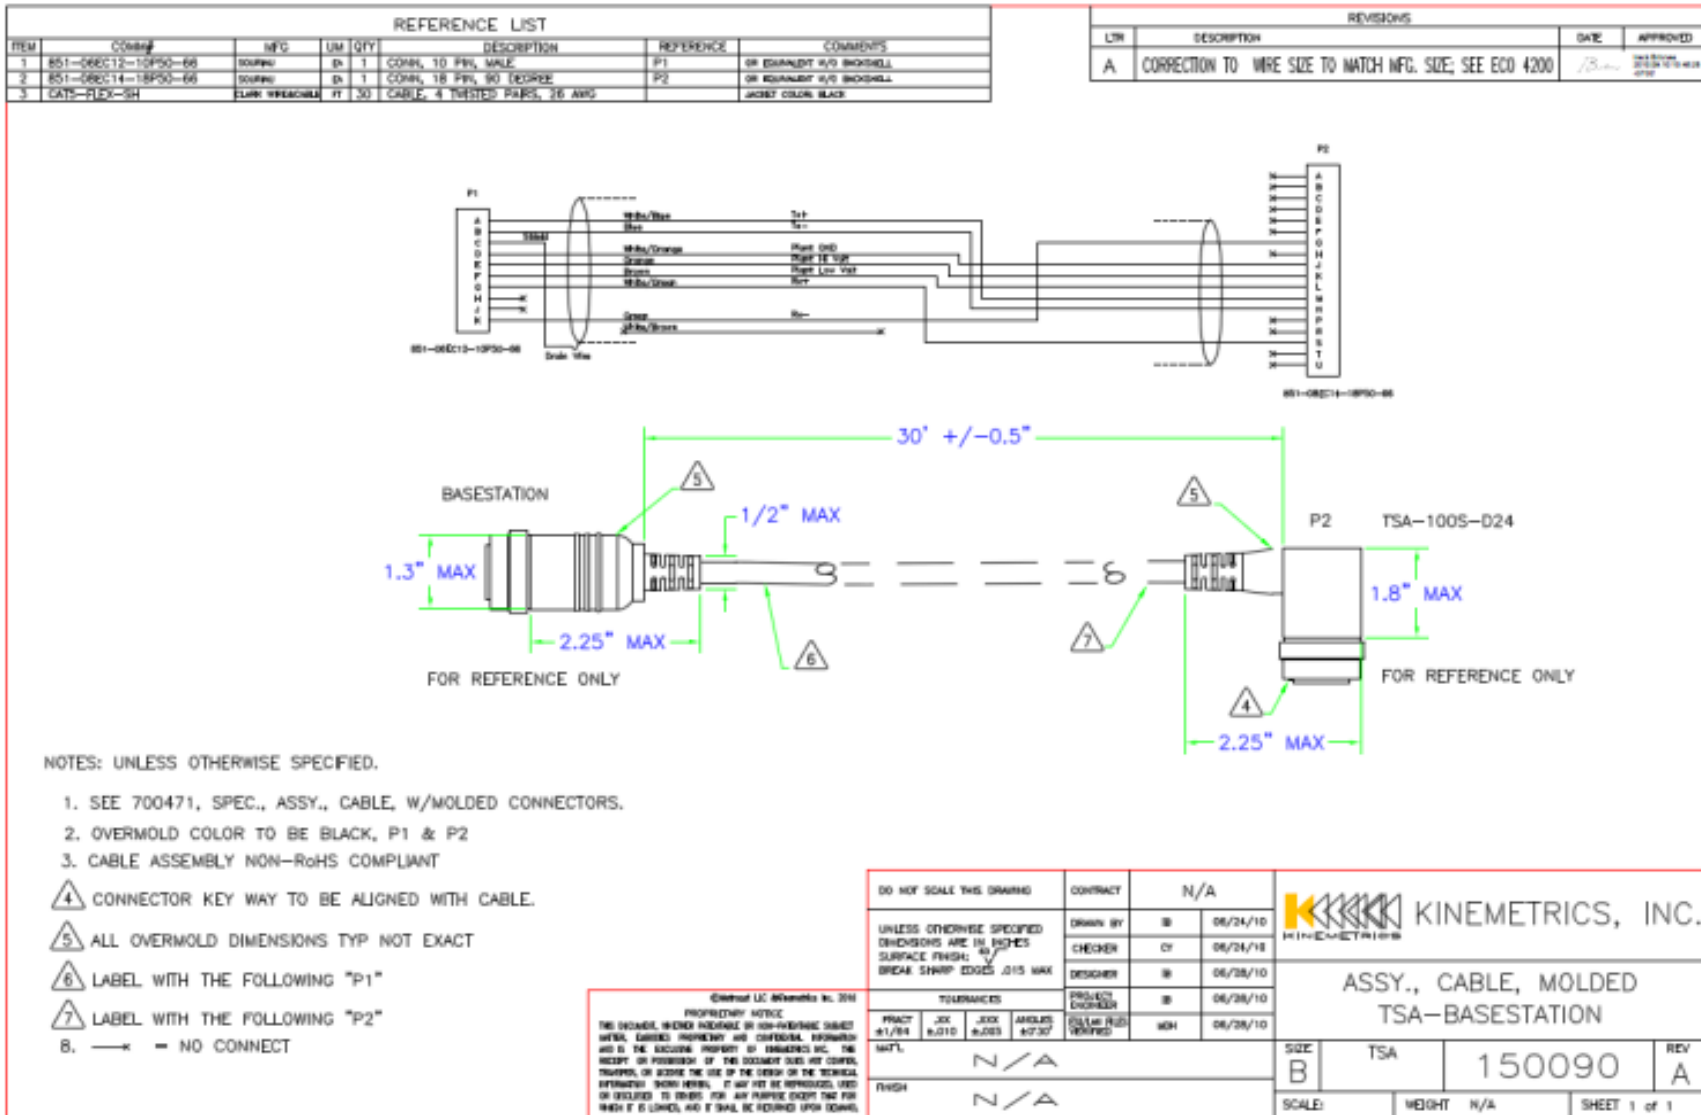


P/N 150094-PL, iCOBI Interface to Dual RJ45F

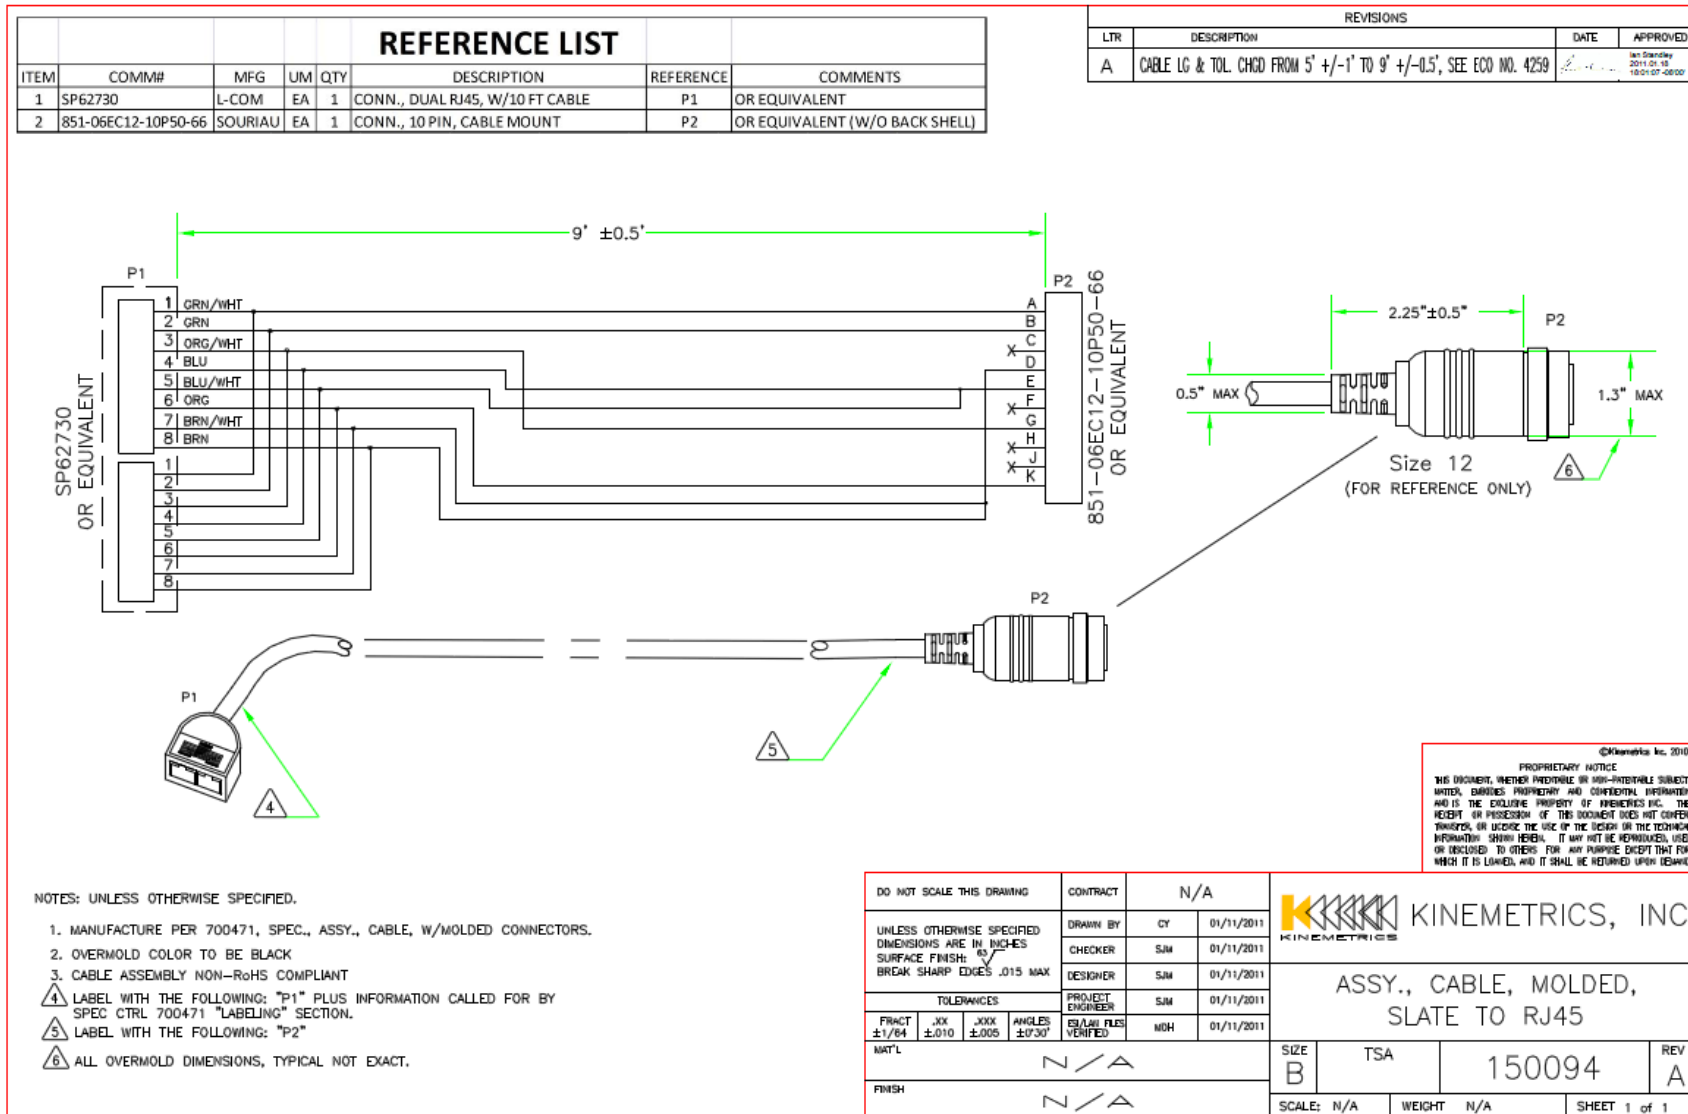

P/N 150093-PL, TSA to Dual RJ45F

REFERENCE LIST						
ITEM	COMM#	MFG	UM	QTY	DESCRIPTION	REFERENCE
1	SP62730	L-COM	EA	1	CONN., DUAL RJ45, W/10 FT CABLE	P1
2	851-08EC14-18P50-66	SOURIAU	EA	1	CONN., 18 PIN, CABLE MOUNT, RT ANGLE	P2

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
A	CABLE LG & TOL. CHGD FROM 5' +/-1' TO 9' +/-0.5', SEE ECO NO. 4259	2011.01.18 10:00:45 -0800	

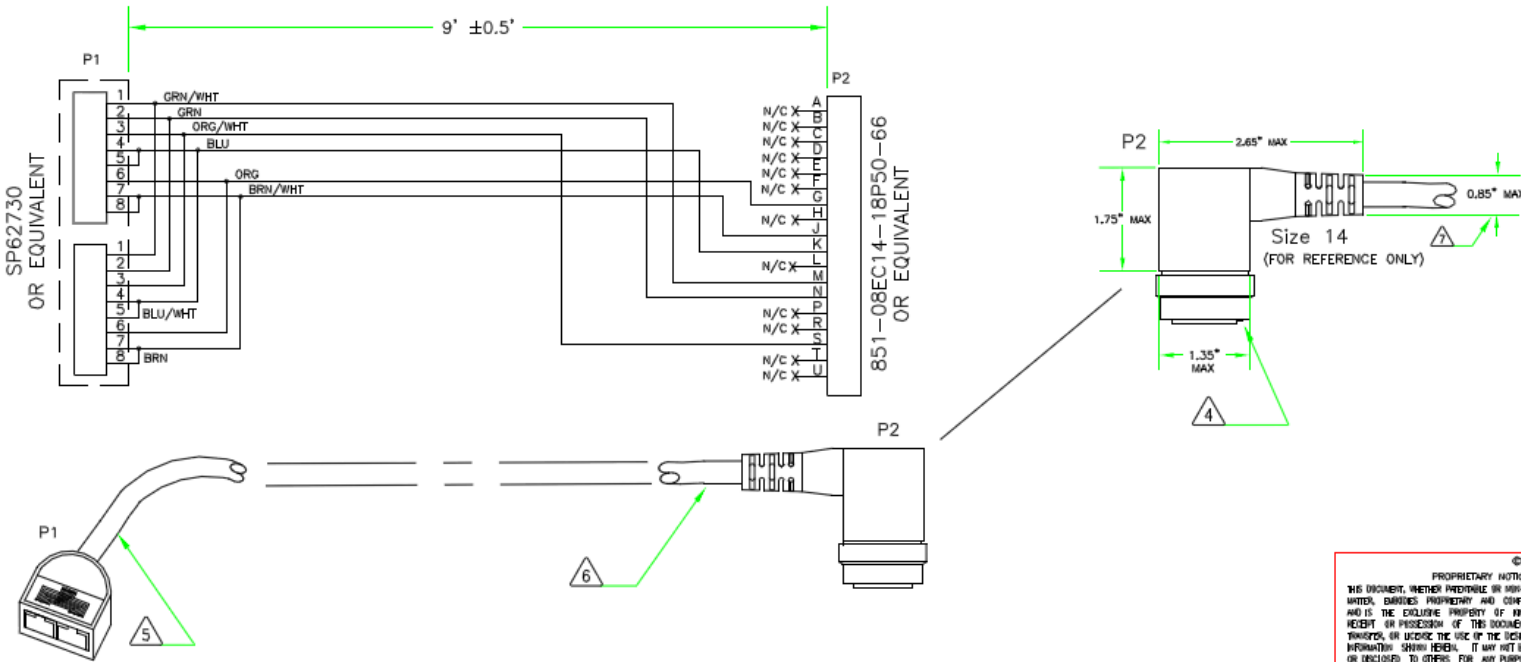

NOTES: UNLESS OTHERWISE SPECIFIED.

- MANUFACTURE PER 700471, SPEC., ASSY., CABLE, W/MOLDED CONNECTORS.
- OVERMOLD COLOR TO BE BLACK
- CABLE ASSEMBLY NON-RoHS COMPLIANT
- CONNECTOR KEY WAY TO BE ALIGNED WITH CABLE.
- LABEL WITH THE FOLLOWING: "P1" PLUS INFORMATION CALLED FOR BY SPEC CTRL 700471 "LABELING" SECTION.
- LABEL WITH THE FOLLOWING: "P2"
- ALL OVERMOLD DIMENSIONS, TYPICAL NOT EXACT.

DO NOT SCALE THIS DRAWING		CONTRACT	N/A	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		DRAWN BY	CY	01/10/2011
SURFACE FINISH: 63		CHECKER	SJM	01/10/2011
BREAK SHARP EDGES .015 MAX		DESIGNER	SJM	01/10/2011
TOLERANCES		PROJECT ENGINEER	SJM	01/10/2011
FRAC'T	.XX	XXX	ANGLES	±0'30"
±1/64	±.010	±.005	ES&M FILES	VERIFIED
MAT'L		N/A		
FINISH		N/A		

KINOMETRICS, INC.			
ASSY., CABLE, MOLDED, TSA TO DUAL RJ45			
SIZE	TSA	150093	REV
B			A
SCALE: NONE	WEIGHT	N/A	SHEET 1 of 1

©Kinometrics Inc. 2010
 PROPRIETARY NOTICE
 THIS DOCUMENT, WHETHER PRINTABLE OR NON-PRINTABLE SUBJECT MATTER, REMAINS PROPRIETARY AND CONFIDENTIAL INFORMATION AND IS THE EXCLUSIVE PROPERTY OF KINOMETRICS INC. THE RECEIPT OR POSSESSION OF THIS DOCUMENT DOES NOT CONFER, TRANSFER, OR LICENSE THE USE OF THE DESIGN OR THE TECHNICAL INFORMATION SHOWN HEREIN. IT MAY NOT BE REPRODUCED, USED OR DISCLOSED TO OTHERS FOR ANY PURPOSE EXCEPT THAT FOR WHICH IT IS LOANED, AND IT SHALL BE RETURNED UPON DEMAND.

P/N 112293-PL, iCOBI Ethernet to RJ45M, Optional

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
A	REV WIRING AT P1 PINS C & D, SEE ECO No. 3623	02-07-07	TLJ
B	REV'D TO B SIZE AND UPDATED FORMAT, SEE ECO No. 3640		

Standard "Ethernet" Mating Connector
851-068C12-803K4

P1	Color	Label	P2	Label
A	(3-Green/White RxD+)	ETRX+	(3-Green/White RxD+)	3
B	(6-Green RxD-)	ETRX-	(6-Green RxD-)	6
C	(1-Orange/White TxD+)	ETTX+	(1-Orange/White TxD+)	1
D	(2-Orange TxD-)	ETTX-	(2-Orange TxD-)	2
E	(8-Brown TDE+)	TDE+	(8-Brown TDE+)	8
F	(7-Brown/White TDE-)	TDE-	(7-Brown/White TDE-)	7
G	(4-Blue SP+)	Sp+	(4-Blue SP+)	4
H	(5-Blue/White SP-)	Sp-	(5-Blue/White SP-)	5

SHIELDED CAT 5

DO NOT SCALE THIS DRAWING		CONTRACT	N/A
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		DRAWN BY	CY 01/10/2007
SURFACE FINISH: 40		CHECKER	DJP 01/10/2007
BREAK SHARP EDGES .015 MAX		DESIGNER	CY 01/10/2007
TOLERANCES		PROJECT ENGINEER	TLJ 01/10/2007
FRACT	XX	XXX	ANGLES
1/8	0.010	0.005	90°/30°
MATL		TYPICAL PILES VERIFIED	
		N/A	
FINISH		N/A	

NOTES:

- SEE 700471, SPEC., ASSY., CABLE, W/MOLDED CONNECTORS.
- OVERMOLD COLOR TO BE BLACK.
- CABLE JACKET TO BE BLACK.
- PURCHASING SOURCE, ISC ENGINEERING, P/N 1003794.

KINEMETRICS, INC.

ASSY., CABLE,
MOLDED, ETHERNET

SIZE	ROCK	REV
B	112293	B

SCALE:	WEIGHT	N/A	SHEET 1 of 1
--------	--------	-----	--------------

©Kinemetrix Inc & Quatern Inc 2007
 PROPRIETARY NOTICE
 THIS DOCUMENT, WHETHER PRINTED OR NON-PRINTED, IS THE EXCLUSIVE PROPERTY OF KINEMETRICS, INC. & QUATERN, INC. THE RECEIPT OR POSSESSION OF THIS DOCUMENT DOES NOT CONFER, TRANSFER, OR LICENSE THE USE OF THE DESIGN OR THE TECHNICAL INFORMATION SHOWN HEREIN. IT MAY NOT BE REPRODUCED, USED OR DISCLOSED TO OTHERS FOR ANY PURPOSE EXCEPT THAT FOR WHICH IT IS LOANED, AND IT SHALL BE RETURNED UPON DEMAND.

P/N 112294-PL, iCOBI Console to DB9F, Optional

		REVISIONS	
LTR	DESCRIPTION	DATE	APPROVED
A	REV'D TO B SIZE AND UPDATED FORMAT, SEE ECO No. 3640		

#24 AWG FOIL SHIELDED

Rock Standard Serial & USB Mating Connector

DB9F

P1

P2

25'

2 1/4"

1"

1/2"

1 3/4"

3/8"

1 9/16"

NOTES:

- SEE 700471, SPEC., ASSY., CABLE, W/MOLDED CONNECTORS.
- OVERMOLD COLOR TO BE BLACK.
- CABLE JACKET TO BE BLACK.
- PURCHASING SOURCE, ISC ENGINEERING, P/N 1003795.

DO NOT SCALE THIS DRAWING	CONTRACT	N/A	KINEMATRICS, INC.							
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES SURFACE FINISH: 63 BREAK SHARP EDGES .015 MAX	DRAWN BY	CY			01/10/2007					
©Kinometrics Inc & Quanta Inc 2007 PROPRIETARY NOTICE THIS DOCUMENT, WHETHER PRINTED OR NON-PRINTABLE SUBJECT MATTER, IS THE EXCLUSIVE PROPERTY OF KINEMATRICS, INC. & QUANTA, INC. THE RECEIPT OR POSSESSION OF THIS DOCUMENT DOES NOT CONFER, TRANSFER OR LICENSE THE USE OF THE DESIGN OR THE TECHNICAL INFORMATION SHOWN HEREIN. IT MAY NOT BE REPRODUCED, USED OR DISCLOSED TO OTHERS FOR ANY PURPOSE EXCEPT THAT FOR WHICH IT IS LOANED, AND IT SHALL BE RETURNED UPON DEMAND.	CHECKER	IMP	01/10/2007	ASSY., CABLE, MOLDED, CONSOLE						
	TOLERANCES		DESIGNER		CY	01/10/2007				
	FRACT	JXX	JXX		ANGLES	PROJECT	TLJ	01/10/2007		
	1/16	0.010	0.005		10°/30°	DESIGN FILES VERIFIED	MDH	01/11/2007		
MATL	N/A		SIZE	ROCK	112294	REV	A			
FINISH	N/A		B			SCALE:	WEIGHT	N/A	SHEET	1 of 1

P/N 150112A, Base Plate

